


# RIGHT REAR SUSPENSION

This issue features the right rear suspension of the Batmobile, as featured in the legendary 1989 film.

### PARTS RECEIVED

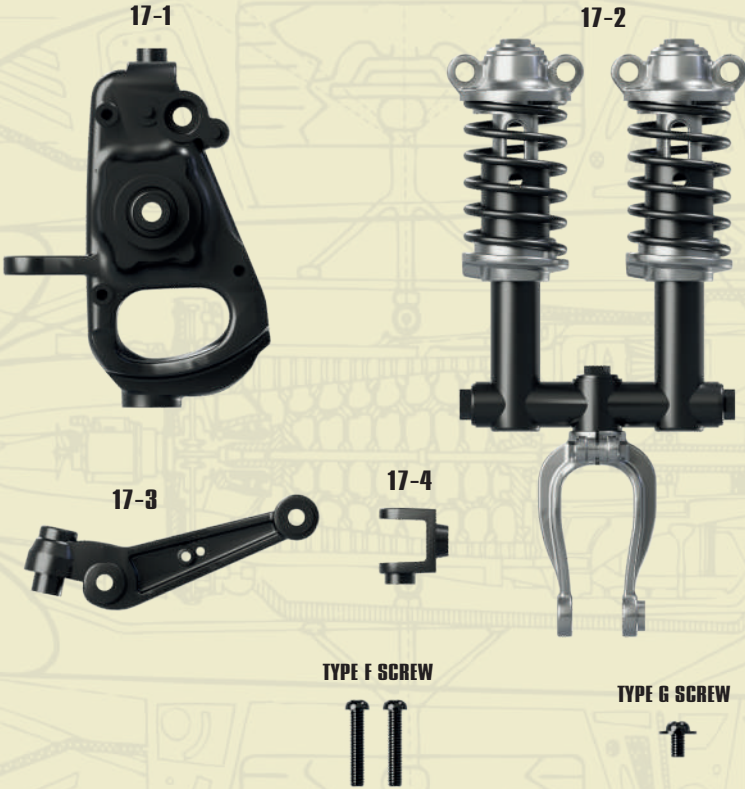


NOTE: The appearance of the parts shown here may be slightly different from the parts delivered with the issue.


### PARTS LIST

|                                               |      |
|-----------------------------------------------|------|
| RIGHT REAR SUSPENSION TILT FRAME .....        | 17-1 |
| RIGHT REAR SUSPENSION SHOCK ABSORBERS .....   | 17-2 |
| RIGHT REAR SUSPENSION LOWER ARM .....         | 17-3 |
| RIGHT REAR SUSPENSION LOWER ARM BRACKET ..... | 17-4 |
| TYPE F SCREWS .....                           | ×2+1 |
| TYPE G SCREW .....                            | ×1+1 |


**17A** Fit the bracket **17-4** to the suspension lower arm **17-3**, in the orientation shown. Fasten the parts with a type **F** screw, but do not tighten the joint fully, as the arm must be able to move.

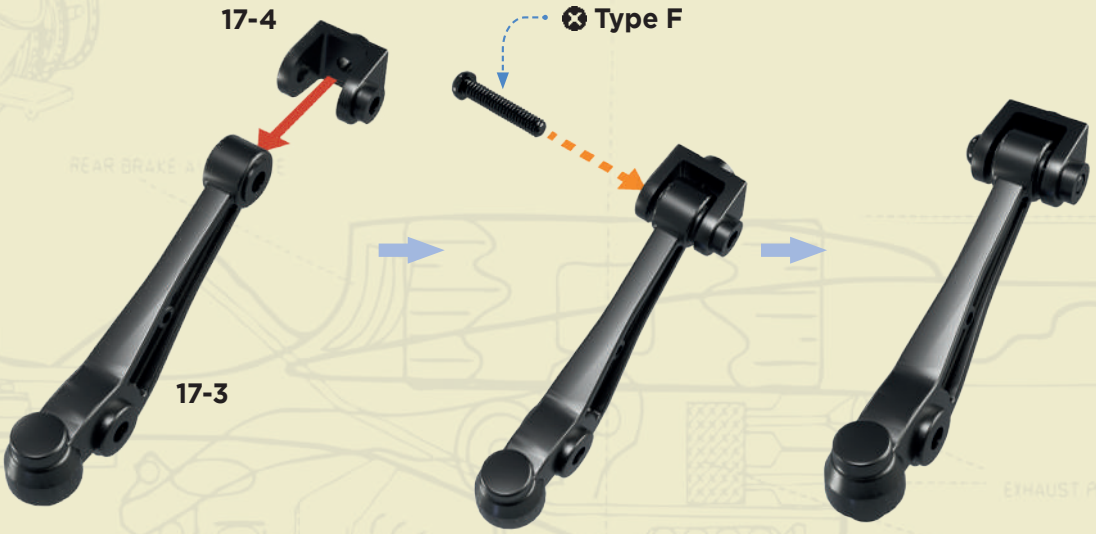

**17B** Fit the right rear suspension shock absorbers **17-2** to the lower arm of the assembly from step **17A**. Fasten the parts with a type **F** screw, but do not tighten the joint fully, as the arm must be able to move.

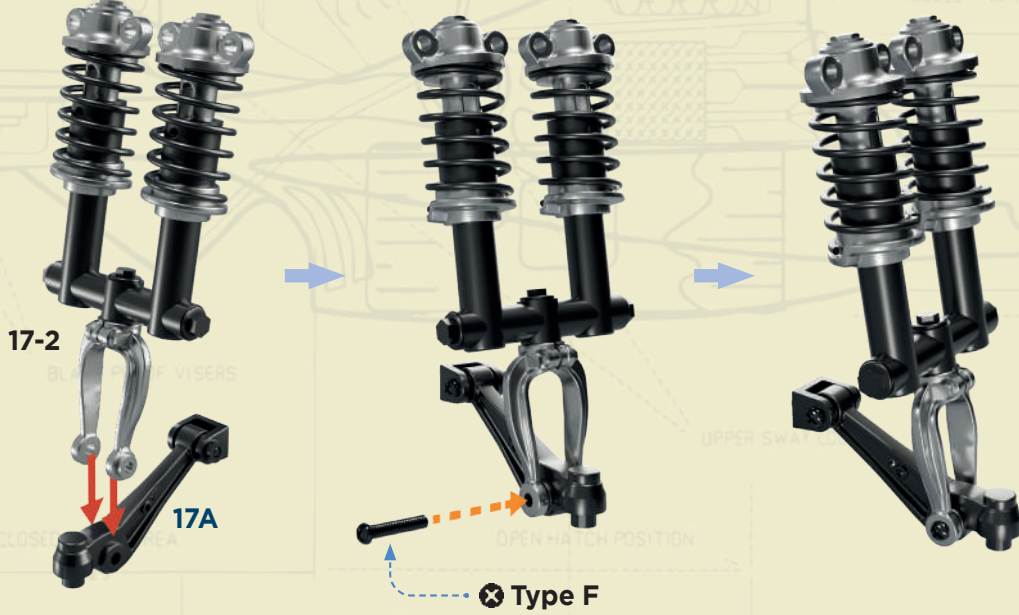

**17C** Fit the assembly from step **17B** into the hole in the suspension tilt frame **17-1**. Fasten the parts with a type **G** screw from below, but do not tighten it completely, as the arm must be able to move.

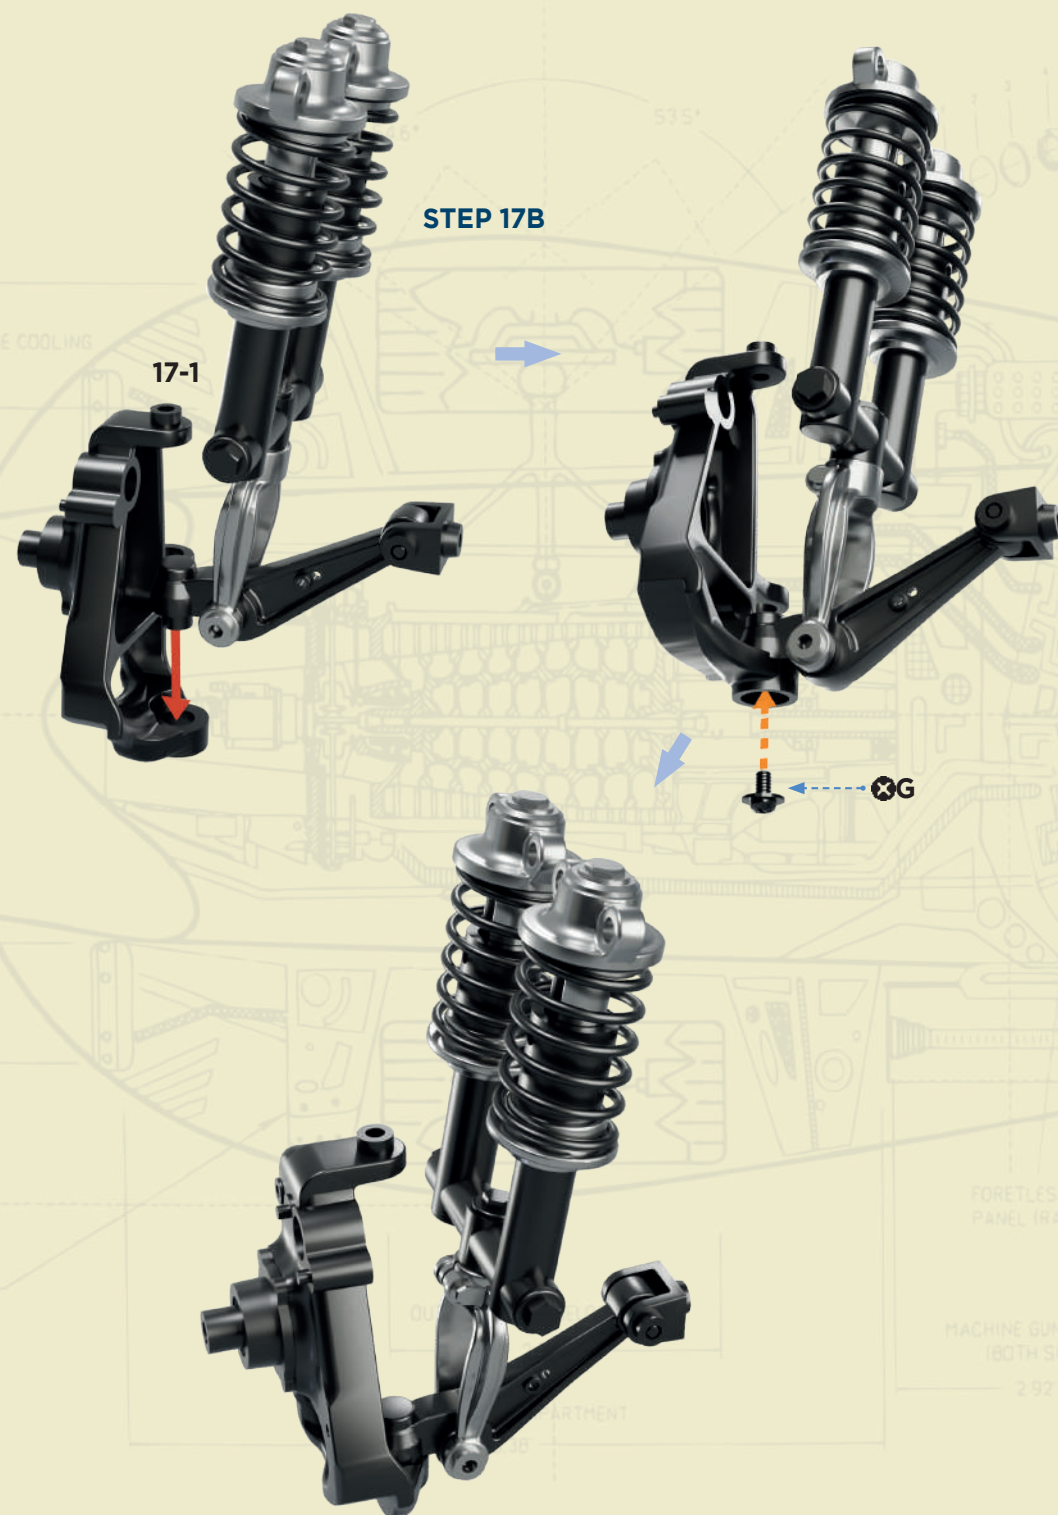

**Final result**

**RIGHT REAR SUSPENSION**

